

QUANTOFIX® Carbonate hardness

Pack content:

1 aluminum container with 100 test strips

Hazard warnings:

This test does not contain hazardous substances that must be labelled.

General indications:

Remove only as many test strips as are required. Close the container immediately after removing a strip. Do not touch the test field.

Additional indications:

Conversion factors: $1\text{ }^{\circ}\text{d} = 1.8\text{ }^{\circ}\text{f} = 1.25\text{ }^{\circ}\text{e} = 17.8\text{ mg/L CaCO}_3$

Instructions for use:

1. Dip the test strip into the test solution for 5 s.
2. Shake off excess liquid.
3. Wait 30 s.
4. Compare test field with the color scale.

Interferences:

The presence of strong bases and other acid-consuming compounds will lead to incorrect results.





Disposal:

Information regarding disposal can be found in the safety data sheet. You can download the SDS from www.mn-net.com/SDS.

Storage:

Avoid exposing the strips to sunlight and moisture. Keep container cool and dry (storage temperature 4–30 °C).

If correctly stored, the test strips may be used until the use-by-date printed on the packaging.

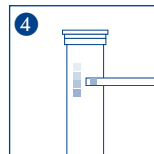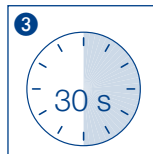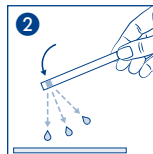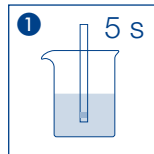

CTL SCIENTIFIC SUPPLY CORP. 1016-3 Grand Boulevard, Deer Park, NY 11729

Tel: 631-242-4249

Web: www.ctlscientific.com

Manufacturer: Macherey-Nagel GmbH & CO. KG

Rev: 2025-03