

QUANTOFIX[®] Carbonate hardness

Pack content:

1 aluminium container with 100 test strips

General indications:

Remove only as many test strips as are required. Close the container immediately after removing a strip. Do not touch the test field.

Additional indications:

Conversion factors: $1^{\circ}\text{d} = 1.8^{\circ}\text{f} = 1.25^{\circ}\text{e} = 17.8 \text{ mg/L CaCO}_3$

Instructions for use:

1. Dip the test strip into the test solution for 5 s.
2. Shake off excess liquid.
3. Wait 30 s.
4. Compare test field with the color scale.





Interferences:

The presence of strong bases and other acid-consuming compounds will lead to incorrect results.

Storage:

Avoid exposing the strips to sunlight and moisture. Keep container cool and dry (storage temperature not above +30 °C).

If correctly stored, the test strips may be used until the use-by-date printed on the packaging.

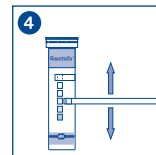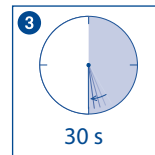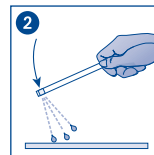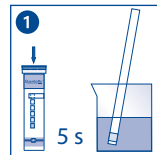

Product data and ordering information

Type	Semi-quantitative test strips
Presentation	Tube of 100 test strips
Color reaction	bright green to blue
Gradation	0 · 3 · 6 · 10 · 15 · 20 °d
REF	91323